

## Resetting Device Address - BDX & LX1

Each GrowNET™ device must be assigned an address number before the BDX system can begin talking to it. All devices come from the factory without an address assigned (unless specified).

***\*The device remembers its address after it has been assigned even if it is disconnected from the system.***


The device address can be set by following the steps outlined below.

### Tools Required:

- LX1 AgrowLINK USB Tool
- BDX BatchMATIC
- RJ45 Cable
- Agrowtek Device

### Process:

- Connect the LX1 to the USB port behind the BDX Screen.

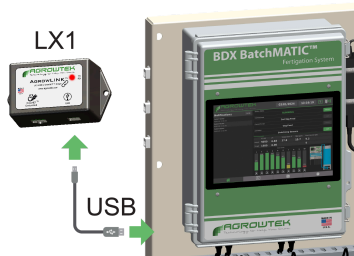


- Navigate to **System Settings**. (*Gear tab on bottom, Tools tab on top*)




- Select **"Load Firmware"**



- Select **"Connect to LX1 AgrowLINK"**

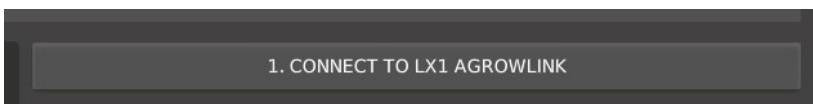


- **“Select A Device Type”** from the drop down.

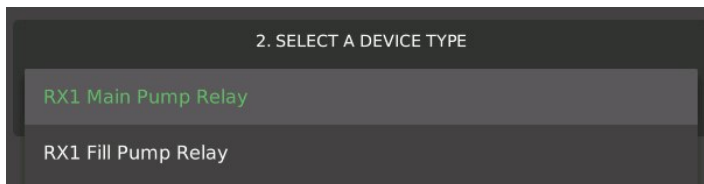

- Connect the device to the RJ-45 port on the LX1.



 - Select **“Load Firmware to GrowNET™ Device”**



- You have 30 seconds after connecting the RJ-45 cable to begin the update.
  - *If the device does not synchronize, unplug the RJ-45 cable and retry.*



- ❖ The device’s address will now be set, and the BDX will now recognize when it is plugged in.

*Please contact Agrowtek if you require further support. 847-380-3009*